# Ignition transformers TZI, TGI

Technical Information · GB **8.1.1** Edition 11.09

- Electrical ignition of gas burners
- Ignition and burner control with a single electrode possible
- For installation in a control cabinet or wall mounting
- Complying with EN 61558-2-3
- TZI 7,5-20/33R complies with CSA
- TZI 7,5-20/33R and TZI 7,5-20/33W are UL listed





# Contents

Ignition transformers TZI, TGI	1
Contents	2
1 Application	3
1.1 Examples of application	5
1.1.1 Double-electrode operation	5
2 Certification	
3 Function	
3.1 Connection diagrams	
4 Selection	
4.1 Selection table	8
4.1.1 Type code	
5 Project planning information	
5.1 Operation	
5.3 Cable selection	
5.4 Reduction of EMC, wiring	
5.5 Single-electrode operation	
5.6 Intermittent operation/Star electrodes	
5.7 Duty cycle	
6 Accessories	
6.1 High-voltage cable	
6.2 Radio interference suppressed electrode adapters	
7 Technical data	
Feedback	
Contact	. 14







# 1 Application

Ignition transformers TZI and TGI are designed for high-voltage spark ignition of gas burners and gas-ignited or directly ignited oil burners. The ignition transformers can also be used on burners with single-electrode operation; the ignition current and ionisation current flow over a common electrode. Ignition transformer TZI fulfils the requirements for enclosure IP 20. It is suitable for installation in a control cabinet. Ignition transformer TGI in its die-cast aluminium housing meets the requirements for enclosure IP 65. It is suitable for on-site mounting near to the burner.

Application



Bogie hearth forging furnace in the metallurgical industry




Intermittent shuttle kiln in the ceramics industry



Walking beam furnace with overhead firing

Application

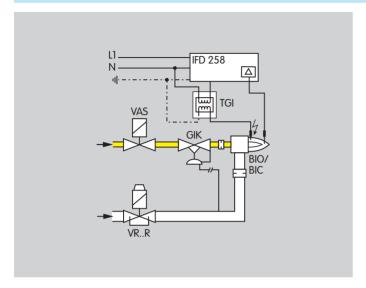


# 1.1 Examples of application

#### 1.1.1 Double-electrode operation

Ignition using ignition electrode

Ignition transformer TGI is supplied with voltage via the automatic burner control unit IFD 258. The ignition transformer generates a high voltage. This high voltage creates ignition sparks between the ignition electrode and burner ground. After the burner start, a current flows via the ionisation electrode for flame control.

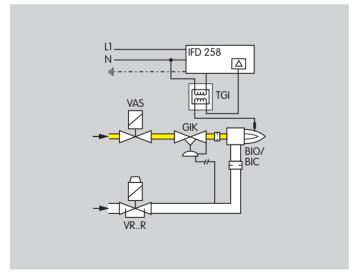

#### 1.1.2 Single-electrode operation

Ignition using an ignition and ionisation electrode

After burner start, a flame control current flows via the same electrode that is also used for ignition.






# 2 Certification

Ignition transformers TZI and TGI are built for applications pursuant to the Machinery Directive 2006/42/EC.

#### TZI 7,5-20/33R

Complies with Canadian Standards Association CSA C22.2 No. 13-1962.


TZI 7,5-20/33R, TZI 7,5-20/33W Complies with UL-506.

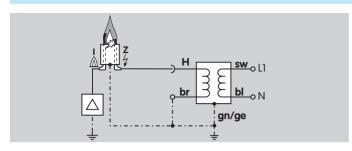

#### 3 Function


## 3.1 Connection diagrams

Ignition: double-electrode operation

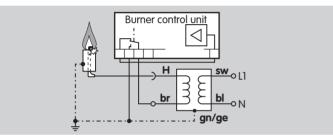

#### Ignition: single-electrode operation

Single-electrode operation is possible only in conjunction with suitable automatic burner control units. The switchover between ignition and monitoring is performed by the automatic burner control unit.

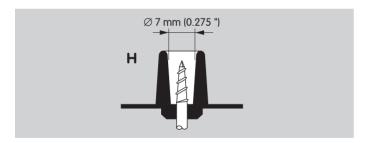

#### High-voltage connection

Cut end of high-voltage cable is inserted into the shroud and screwed onto the wood screw (**H**).

#### Legend

Н	High-voltage connection
br	Connection cable brown
sw	Connection cable black
bl	Connection cable blue
gn/ge	Connection cable green/yellow

# 4 Selection

# 4.1 Selection table

	R	W
TZI 5-15/20	•	•
TZI 5-15/100	•	•
TZI 7-25/20	•	•
TZI 7,5-12/100	•	•
TZI 7,5-20/33	•	•
TGI 5-15/100	•	•
TGI 7-25/20	•	•
TGI 7,5-12/100	•	•
TGI 7,5-20/33	•	•

# Order example

TZI 5-15/20W

# 4.1.1 Type code

**	
Code	Description
TZI TGI	Ignition transformer Ignition transformer
5	High voltage: 5 kV
7	7 kV
7,5	7.5 kV
-12	Output current: 12 mA at 50 Hz (9 mA at 60 Hz)
-15	15 mA at 50 Hz (11 mA at 60 Hz)
-20	20 mA at 50 Hz (15 mA at 60 Hz)
-25	25 mA at 50 Hz (18 mA at 60 Hz)
/20	Duty cycle: 20%
/33	33%
/100	100%
R	Mains voltage: 115 V
W	230 V

# 5 Project planning information

## 5.1 Operation

The ignition transformers are suitable only for applications for igniting gas burners and gas-ignited or directly ignited oil burners. Do not operate the transformers when no ignition sparks are created.

#### 5.2 Installation

Installation position for TZI and TGI: install in a horizontal position, or with the connections facing down.

Install the ignition transformer directly on the burner (recommended ignition cable length: max. 5 m, recommended < 1 m).

#### TZI

Length of the mains cable is 410 mm.

The ignition transformer has enclosure IP 20. In the event that a different enclosure is needed, install the ignition transformer in a corresponding housing or in a control cabinet as necessary.

#### 5.3 Cable selection

Use mains cable suitable for the type of operation and complying with local regulations.

Install an equipotential bond (4 mm<sup>2</sup>, compliant with local regulations) between burner and ignition transformer.

Use unscreened high-voltage cable for the ignition cable, see [Accessories – p. 11].

Recommended ignition cable length:

max. 5 m, recommended < 1 m. The longer the ignition cable, the lower the ignition capacity.

#### TGI

The TGI housing has an A/F 24 cable gland with a clamping range of 6 to 12 mm and an A/F 27 cable gland with a double seal insert for two cables up to 7 mm in diameter. A seal insert for 10 to 14 mm is enclosed and can be used in the A/F 27 cable gland, see [Dimensions - p. 13].

# 5.4 Reduction of EMC, wiring

Avoid external electrical interference.

Lay cables individually and, if possible, not in a metal conduit.

Do not lay UV/ionisation cable and ignition cables together and lay them as far apart as possible.

Screw the ignition cable securely into the [High-voltage connection – p. 7] on the ignition transformer and run to the burner by the shortest possible route.

Use an interference suppressed electrode adapter on the burner (with 1  $\Omega$  resistor), see [Accessories – p. 11].

# 5.5 Single-electrode operation

Single-electrode operation is possible only in conjunction with suitable automatic burner control units.


For single-electrode operation, wire an equipotential bond between the burner and the automatic burner control unit, see [Ignition: single-electrode operation – p. 7]. Ensure that the wiring has been done correctly, otherwise the connected units will be damaged.

# 5.6 Intermittent operation/Star electrodes

We recommend using 7.5 kV ignition transformers for On/Off intermittent operation or when using burners with star electrodes.

# 5.7 Duty cycle

The duty cycle indicates for how long the ignition transformer can be switched on within 180 s, without it being overloaded.

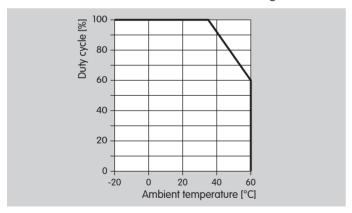

For ignition transformers, the duty cycle is dependent on the ambient temperature.

TZI/TGI duty cycle in % – see [Technical data – p. 12].

Converting the duty cycle into seconds:

Duty cycle [s] = 
$$\frac{\text{Duty cycle [\%]} \times 180 \text{ s}}{100\%}$$


#### Example

Ignition transformer TZI 7-25/20W with a duty cycle of 20% for an ambient temperature of -20 to  $+35^{\circ}$ C.

Duty cycle = 
$$\frac{20 \text{ [\%]} \times 180 \text{ s}}{100\%}$$
 = 36 s

In an ambient temperature of -20 to +35 °C, this results in a maximum duty cycle of 36 s within 180 s for the ignition transformer.

For an automatic burner control unit with an ignition time  $t_Z = 6$  s, for example, the resultant timing cycle is a maximum of 2 ignitions per minute.

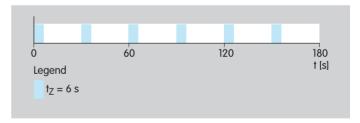

#### 6 Accessories

# 6.1 High-voltage cable

FZLSi 1/7 -50°C (-58°F) to 180°C (356°F),

Order No.: 04250410,

FZLK 1/7 -5°C (23°F) to 80°C (176°F),

Order No.: 04250409.

# 6.2 Radio interference suppressed electrode adapters

Plug cap, 4 mm (0.16 inch), interference-suppressed, Order No. 04115308.

Straight adapter, 4 mm (0.16 inch), interference-suppressed, Order No. 04115307.

Straight adapter, 6 mm (0.2 inch), interference-suppressed, Order No. 04115306.

# 7 Technical data

Туре	Input			Output		Duty cycle**	Enclosure	Weight		
	V AC	Hz*	A*		V mA*		%		kg	
TZI 5-15/20W	230	50 (60)	0.5	(0.35)	5000	15	(11)	20	IP 20	0.9
TZI 5-15/100W	230	50 (60)	0.45	(0.35)	5000	15	(11)	100	IP 20	1.5
TZI 7-25/20W	230	50 (60)	1.1	(0.8)	7000	25	(18)	20	IP 20	1.5
TZI 7,5-12/100W	230	50 (60)	0.6	(0.45)	7500	12	(9)	100	IP 20	2
TZI 7,5-20/33W	230	50 (60)	0.9	(0.7)	7500	20	(15)	33	IP 20	2
TZI 5-15/20R	115	50 (60)	1	(0.7)	5000	15	(11)	20	IP 20	0.9
TZI 5-15/100R	115	50 (60)	0.9	(0.7)	5000	15	(11)	100	IP 20	1.5
TZI 7-25/20R	115	50 (60)	2.2	(1.6)	7000	25	(18)	20	IP 20	1.5
TZI 7,5-12/100R	115	50 (60)	1.2	(0.9)	7500	12	(9)	100	IP 20	2
TZI 7,5-20/33R	115	50 (60)	1.8	(1.35)	7500	20	(15)	33	IP 20	2
TGI 5-15/100W	230	50 (60)	0.45	(0.35)	5000	15	(11)	100	IP 65	3
TGI 7-25/20W	230	50 (60)	1.1	(0.8)	7000	25	(18)	20	IP 65	3
TGI 7,5-12/100W	230	50 (60)	0.6	(0.45)	7500	12	(9)	100	IP 65	3.5
TGI 7,5-20/33W	230	50 (60)	0.9	(0.7)	7500	20	(15)	33	IP 65	3.5
TGI 5-15/100R	115	50 (60)	0.9	(0.7)	5000	15	(11)	100	IP 65	3
TGI 7-25/20R	115	50 (60)	2.2	(1.6)	7000	25	(18)	20	IP 65	3
TGI 7,5-12/100R	115	50 (60)	1.2	(0.9)	7500	12	(9)	100	IP 65	3.5
TGI 7,5-20/33R	115	50 (60)	1.8	(1.35)	7500	20	(15)	33	IP 65	3.5

<sup>\*</sup> Values in brackets apply to 60 Hz.

Converting the duty cycle into seconds, see [Duty cycle – p. 10].

Ambient temperature:

-20 to +60°C.


<sup>\*\*</sup> For temperatures between -20 and +35°C.


Technical data


### 7.1 Dimensions

TZI


Length of connection cable: 410 mm

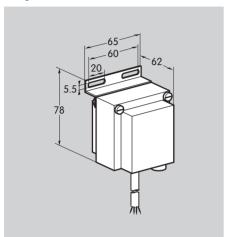

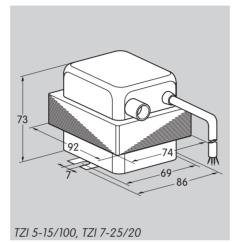

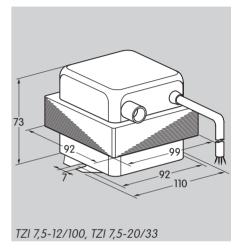

### TGI

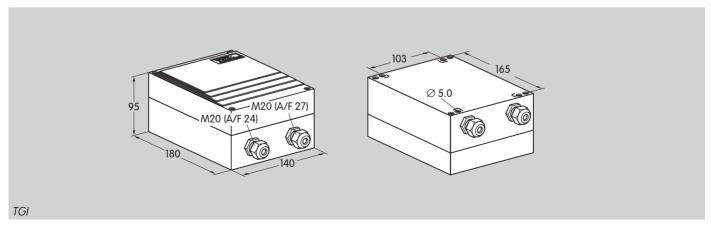



#### Feedback

Finally, we are offering you the opportunity to assess this "Technical Information (TI)" and to give us your opinion, so that we can improve our documents further and suit them to your needs.

## Clarity

Found information quickly Searched for a long time Didn't find information

What is missing?

No answer

# Comprehension

Coherent

Too complicated

No answer

### Scope

Too little Sufficient

Too wide

No answer

#### Use

To get to know the product
To choose a product
Planning

To look for information

Remarks

## **Navigation**

I can find my way around

I got "lost"

No answer

# My scope of functions

Technical department

Sales

No answer

(Adobe Reader 7 or higher required)

## Contact

Elster GmbH Postfach 2809 · 49018 Osnabrück Strotheweg 1 · 49504 Lotte (Büren) Germany

T +49 541 1214-0

F +49 541 1214-370 info@kromschroeder.com

www.kromschro www.elster.com The current addresses of our international agents are available on the Internet:

www.kromschroeder.com → Sales

We reserve the right to make technical modifications in the interests of progress. Copyright © 2007 Elster Group

All rights reserved.